


KYU-S-3(1200)

野菜運搬車

品 番: 271600200000001

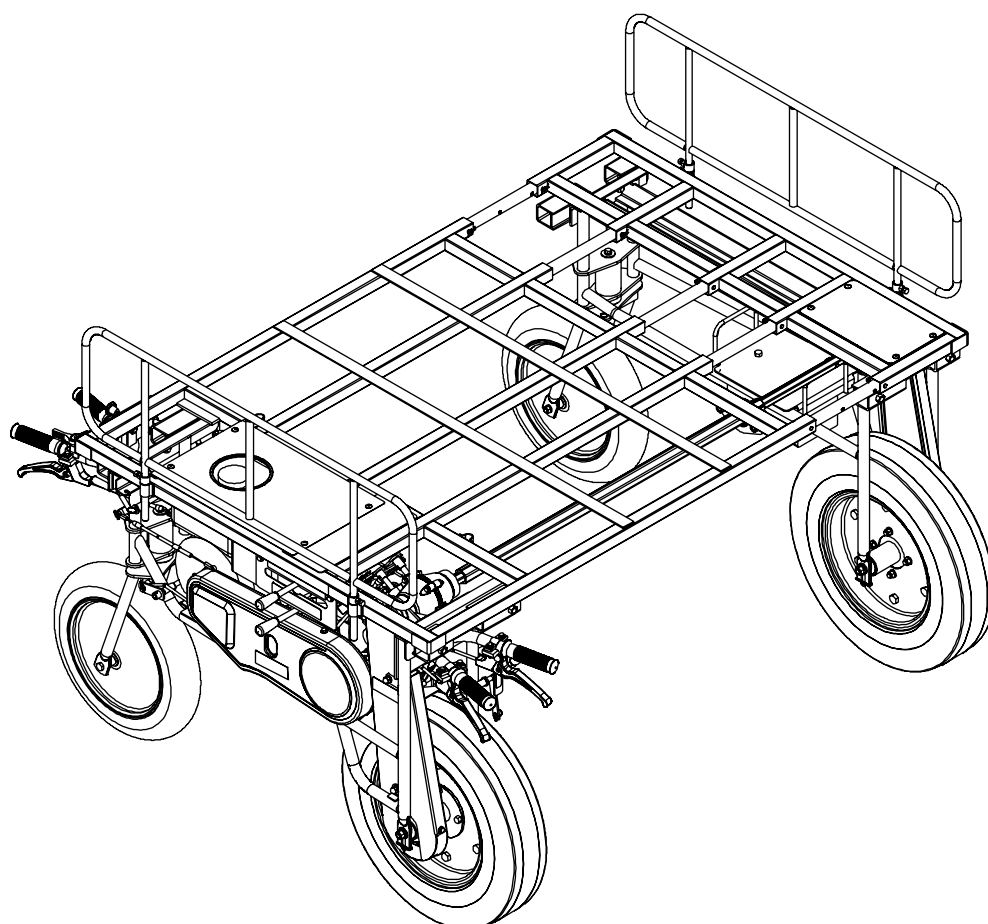

純正部品表

関東農機株式会社

本社工場/本社営業所

鏡石工場/福島営業所

盛岡工場/東北営業所

九州営業所

〒323-0819 栃木県小山市横倉新田493

TEL 0285-27-3271(代) FAX 0285-27-4627

〒969-0403 福島県岩瀬郡鏡石町久来石字大町57

TEL 0248-62-4131(代) FAX 0248-62-4133

〒028-4132 岩手県盛岡市玉山区洪民20-55

TEL 019-683-1911(代) FAX 019-683-1119

〒561-0804 熊本県八代市上片町1351

TEL 0965-31-0730(代) FAX 0965-31-0760



はじめに

この部品表は大切に保管し、次のような場合にお役立てください。

部品取替えの必要がある場合

コードNo.品名をお買い上げ店に連絡してください。


故障した場合

組立て順に図解していますので、分解組立の参考にしてください。

故障診断の場合

サービスマンがこの表を見ながら診断しますので、機械といっしょにお見せください。

S01 エンジン周辺 (1/2)

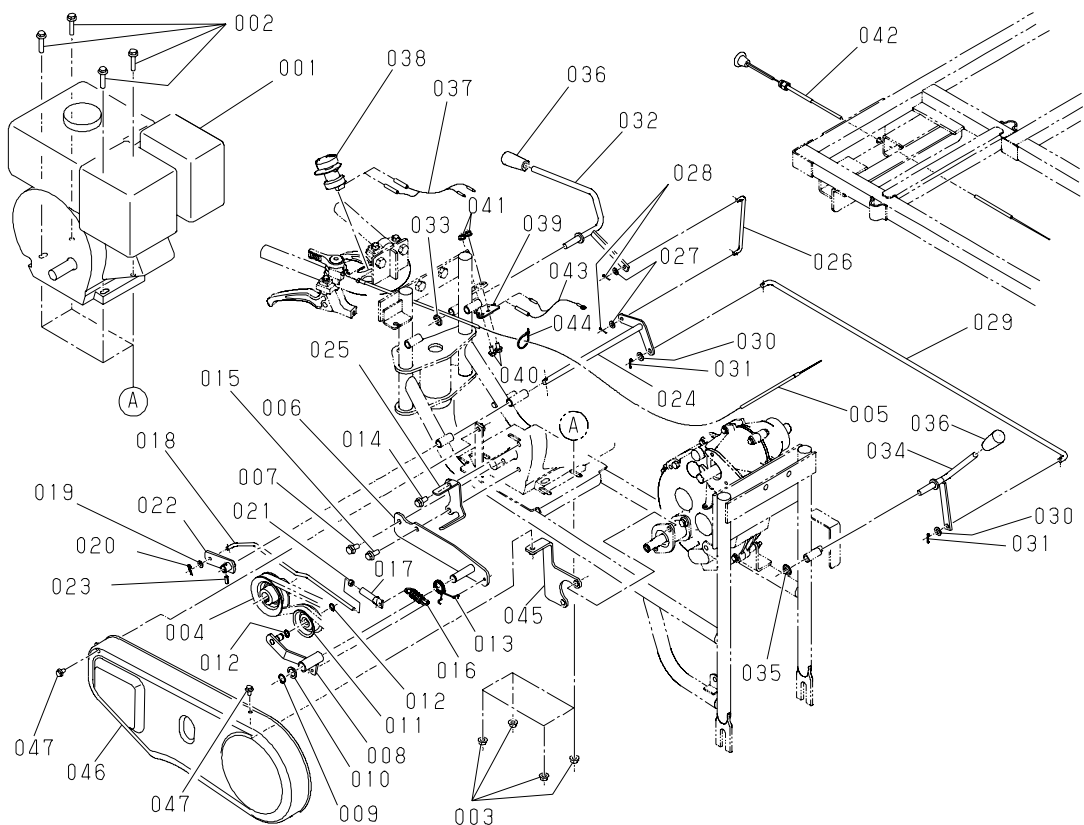


KYU-S-3(1200) 野菜運搬車

図番	品 番	部 品 名 称	数 量	互 換 性	備 考
001	271600000101001	エンジン GB130LN-382	1		
002	0141350835	フランジボルト M8×1.25×35	4		
003	0261050080	フランジナット M8×1.25	4		
004	271500000102001	ドライブプーリー	1		
005	271600000108000	アクセルワイヤー	1		
006	271600000102000	テンションステーコンブ	1		
007	0141350816	フランジボルト M8×1.25×16	1		
008	271600000103001	テンションアームコンブ	1		
009	0461200140	ジクサークリップ S-14	1		
010	0401750140	ヒラザガネ M14	1		
011	222530000353000	45TB1 テンションプーリー	1		
012	0461200100	ジクサークリップ S-10	2		
013	284120000332000	クラッチレバーリターンスプリング	1		
014	0141350816	フランジボルト M8×1.25×16	1		
015	0141350820	フランジボルト M8×1.25×20	1		
016	223100000126002	テンションヒキスプリング	1		
017	271100000313000	テンションロッドケツゴウ(2)	1		
018	271600000104002	テンションロッド(3)	1		
019	0401350060	ヒラザガネ M6	1		
020	0551550600	スナップピン 6	1		
021	0201450060	ロックナット M6×1.0	1		
022	271600000111000	レンケツレバー	1		
023	0541100514	スプリングピン φ5×14	1		
024	271600000105006	レンケツレバートリツケジクコンブ3	1		
025	271600000114000	ベルトオサエケツゴウ	1		
026	271600000106000	レンケツロッド (1)	1		
027	0401350060	ヒラザガネ M6	2		
028	0551151612	ワリピン φ1.6×12	2		
029	271600000109005	レンケツロッド (2)	1		
030	0401270080	ヒラザガネ M8	2		

⇄新旧部品兼用可; ≠新旧部品兼用不可; ←新品は旧部品に兼用可; →旧部品は新品に兼用可

S01 エンジン周辺 (2/2)

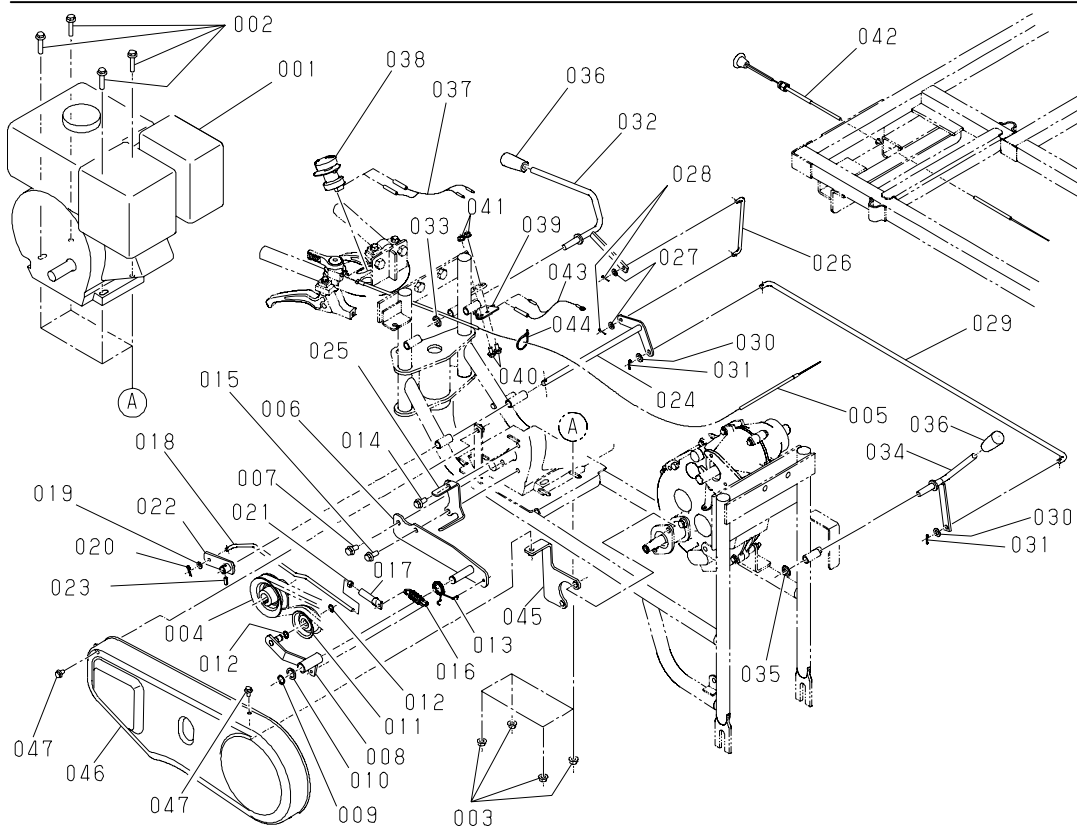


KYU-S-3(1200) 野菜運搬車

[illegible]

⇨新旧部品兼用可: ≠新旧部品兼用不可: ⇐新部品は旧部品に兼用可: →旧部品は新部品に兼用可

S02(1) ミッションケース[本体]

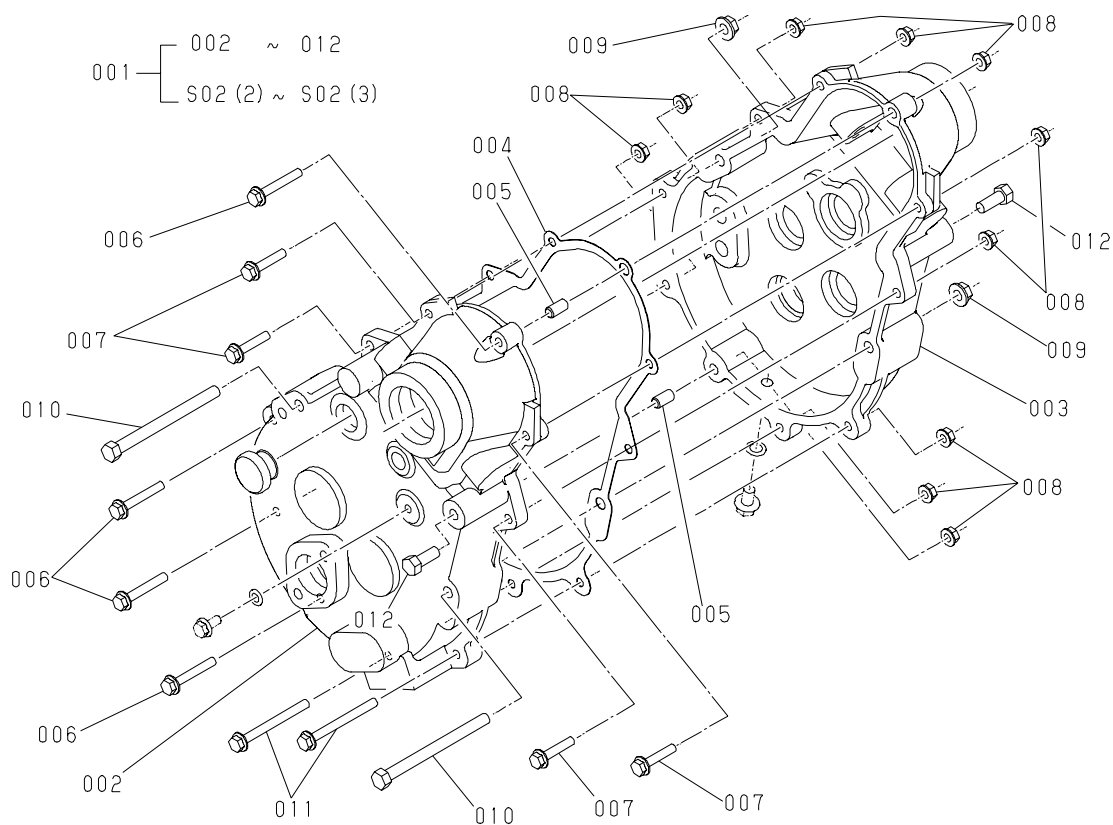


KYU-S-3(1200) 野菜運搬車

[illegible]

⇨新旧部品兼用可; ≠新旧部品兼用不可; ←新部品は旧部品に兼用可; →旧部品は新部品に兼用可

S02(2) ミッションケース[入力軸～出力軸] (1/2)

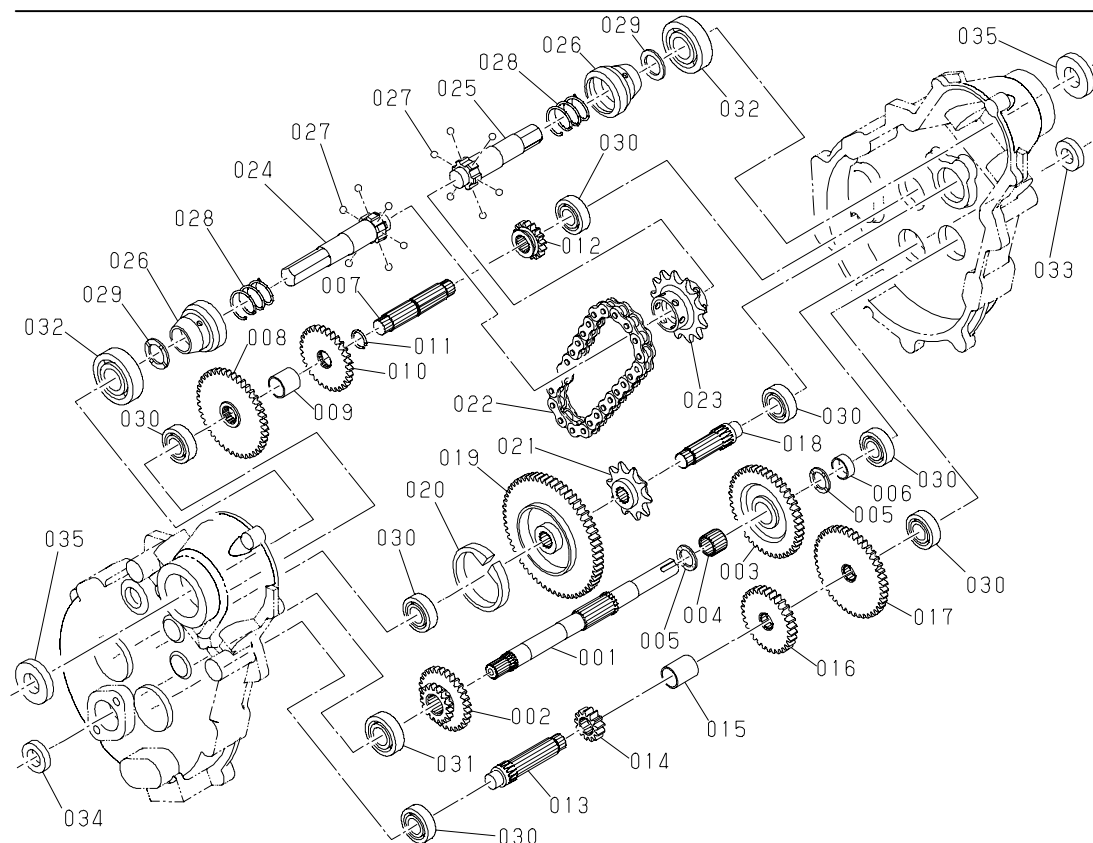


KYU-S-3(1200) 野菜運搬車

図番	品 番	部 品 名 称	数 量	互 換 性	備 考
001	271600000202000	ニュウリョクジク	1		
002	271410000205000	17T-29T スライドギヤ	1		
003	271410000206000	43T-29T ギヤ	1		
004	0882172117	ニードルベアリング 172117	1		
005	282130000205000	スラストワッシャー 17	2		
006	271410000207000	カラー 8.5	1		
007	271410000208005	チュウカンジク (1)	1		
008	271410000209000	42T ギヤ	1		
009	271410000210000	カラー 20.5	1		
010	271410000211000	30T ギヤ (1)	1		
011	034115180208000	トメワ φ17	1		
012	271410000212000	16T スライドギヤ	1		
013	271410000213000	チュウカンジク (2)	1		
014	271410000214000	13T ギヤ	1		
015	271410000215000	カラー 27	1		
016	271410000216000	30T ギヤ (2)	1		
017	271410000217000	43T ギヤ	1		
018	271410000218000	チュウカンジク (3)	1		
019	271410000219000	59T ギヤ	1		
020	241100000216000	ブレーキシュー	1		
021	271410000220000	10T スプロケット	1		
022	271410000221000	チェーン 520K-26LE	1		
023	271410000222000	13T クラッチスプロケット	1		
024	271600000203000	シュツリョクジク 3	1		
025	271410000223002	シュツリョクジク	1		
026	271410000224000	サイドクラッチシフター	2		
027	0771500401	ボール 1/4	12		
028	271410000225001	サイドクラッチモドシスプリング	2		
029	231100000206000	スラストザガネ	2		
030	0810106202	ボールベアリング 6202	7		

⇄新旧部品兼用可; ≠新旧部品兼用不可; ←新品は旧部品に兼用可; →旧部品は新品に兼用可

S02(2) ミッションケース[入力軸～出力軸] (2/2)

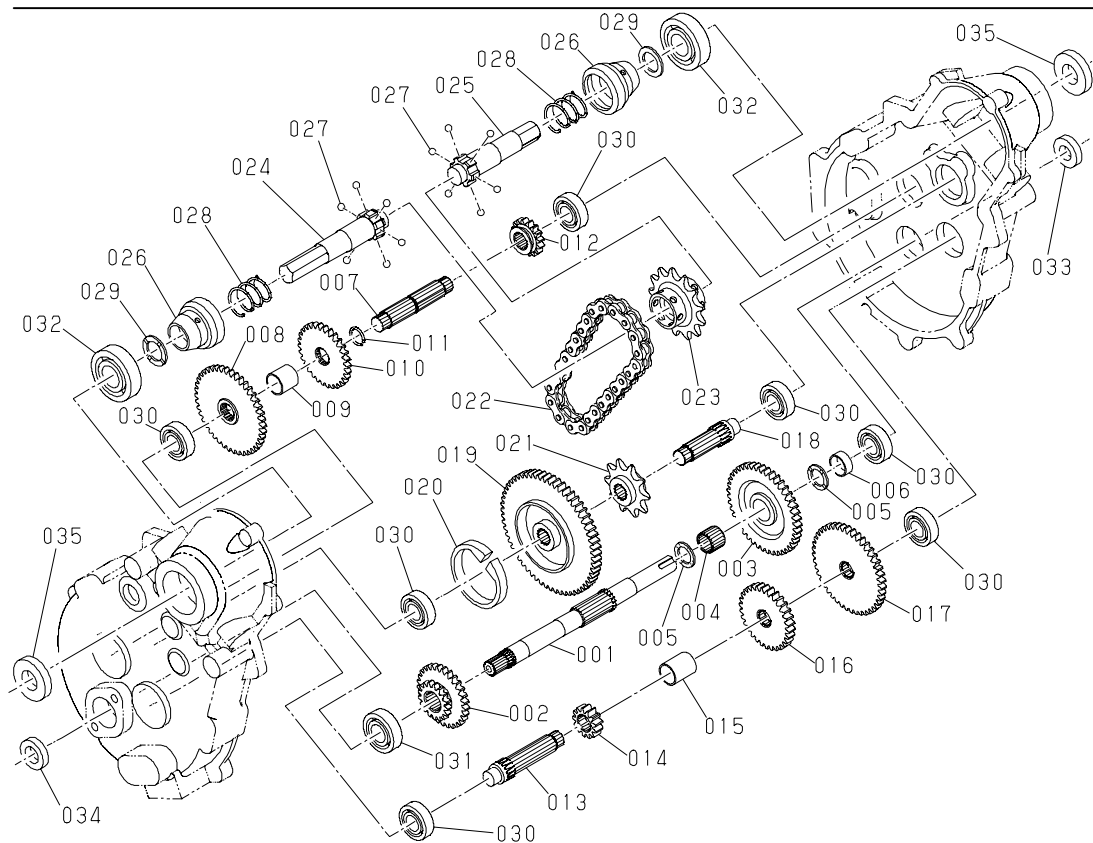


KYU-S-3(1200) 野菜運搬車

[illegible]

⇨新旧部品兼用可; ≠新旧部品兼用不可; ←新部品は旧部品に兼用可; →旧部品は新部品に兼用可

S02(3) ミッションケース[シフター、クラッチ、ブレーキ]

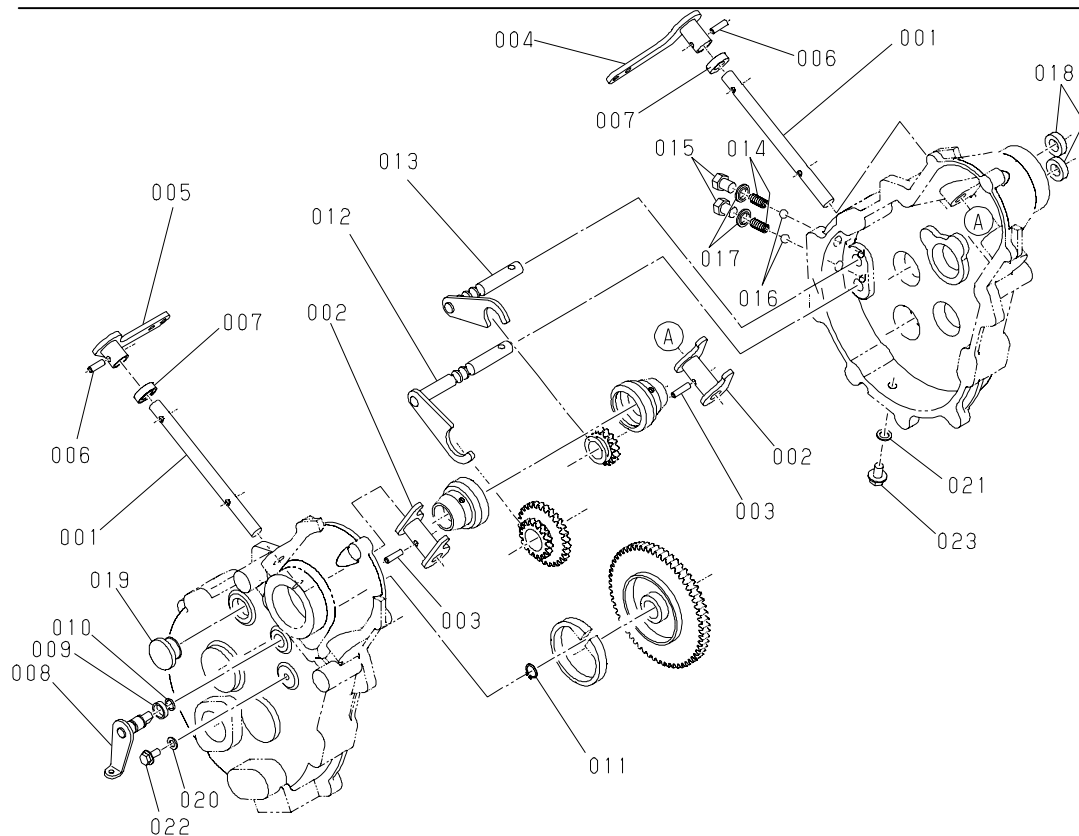


KYU-S-3(1200) 野菜運搬車

[illegible]

⇨新旧部品兼用可: ≠新旧部品兼用不可: ⇩新部品は旧部品に兼用可: →旧部品は新部品に兼用可

S03 駆動ベルト、変速レバー、ブレーキレバー (1/2)

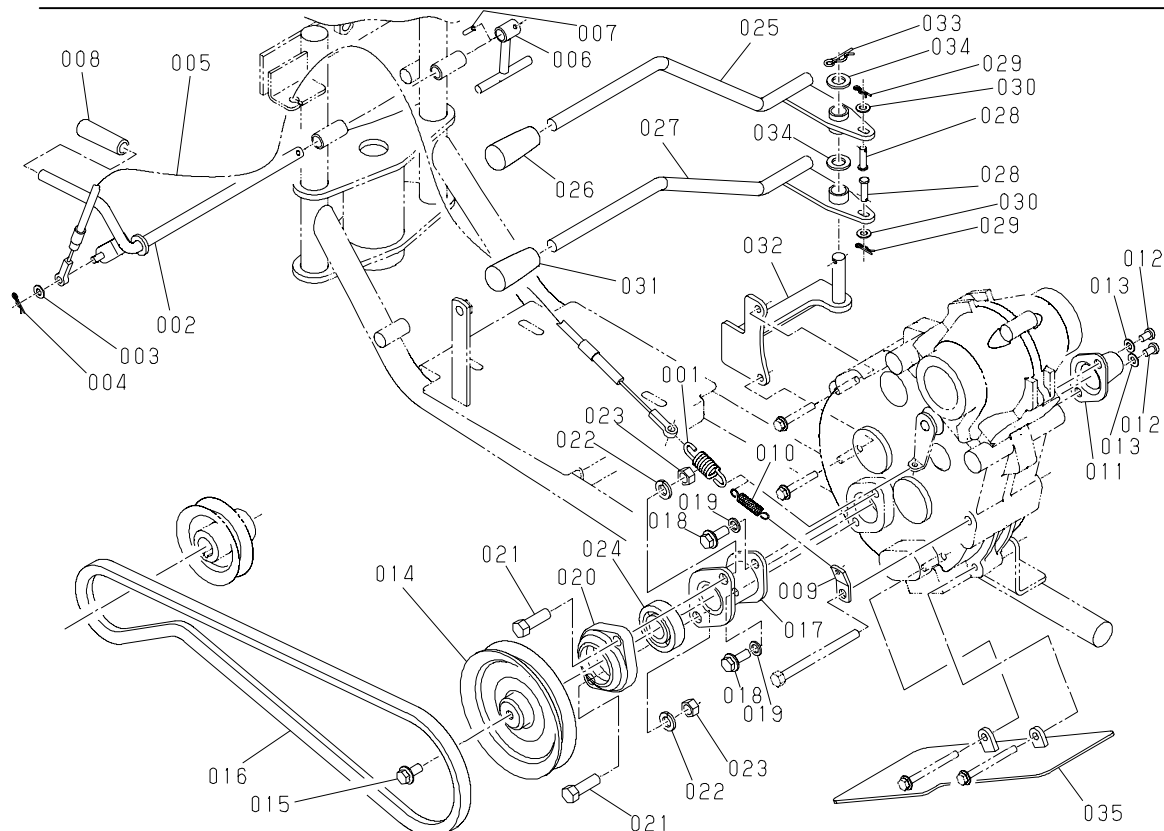


KYU-S-3(1200) 野菜運搬車

図番	品 番	部 品 名 称	数 量	互 換 性	備 考
001	223100000126002	テンションヒキスプリング	1		
002	271600000206001	ブレーキレバーコンブ 3	1		
003	0401350060	ヒラザガネ M6	1		
004	0551550600	スナップピン 6	1		
005	271600000207000	ブレーキワイヤー 3	1		
006	271600000208002	ブレーキストッパー 3	1		
007	0541100416	スプリングピン φ4×16	1		
008	000101510212000	ニギリ 10	1		
009	271410000243000	バネカケ	1		
010	212110000318000	アクセルモッドシバネ	1		
011	222530000411000	P.T.O キャップ	1		
012	0301450610	ナベコネジ M6×1.0×10	2		
013	0401350060	ヒラザガネ M6	2		
014	282130000109000	ドリブンプーリーコンブ	1		
015	0141350816	フランジボルト M8×1.25×16	1		
016	0751110044	V ベルト SB44 レッド	1		
017	271600000204001	ニュウリョクジクササエ	1		
018	0141350820	フランジボルト M8×1.25×20	2		
019	0471700800	ゴムツキザガネ M8	2		
020	271600000205000	ローラジクウケ 14	1		
021	0117351030	ロックボルト M10×1.25×30	2		
022	0451250100	バネザガネ M10	2		
023	0211850100	ロックナット M10×1.25	2		
024	0814106303	ボールベアリング 6303DD	1		
025	271410000238000	シュヘンソクレバーコンブ	1		
026	284100000302000	レバーグリップ (φ12オレンジ)	1		
027	271410000239001	フクヘンソクレバーコンブ	1		
028	0512250622	ヒラアタマツキピン φ6×22	2		
029	0551550600	スナップピン 6	2		
030	0401350060	ヒラザガネ M6	2		

⇄新旧部品兼用可; ≠新旧部品兼用不可; ←新品は旧部品に兼用可; →旧部品は新品に兼用可

S03 駆動ベルト、変速レバー、ブレーキレバー (2/2)

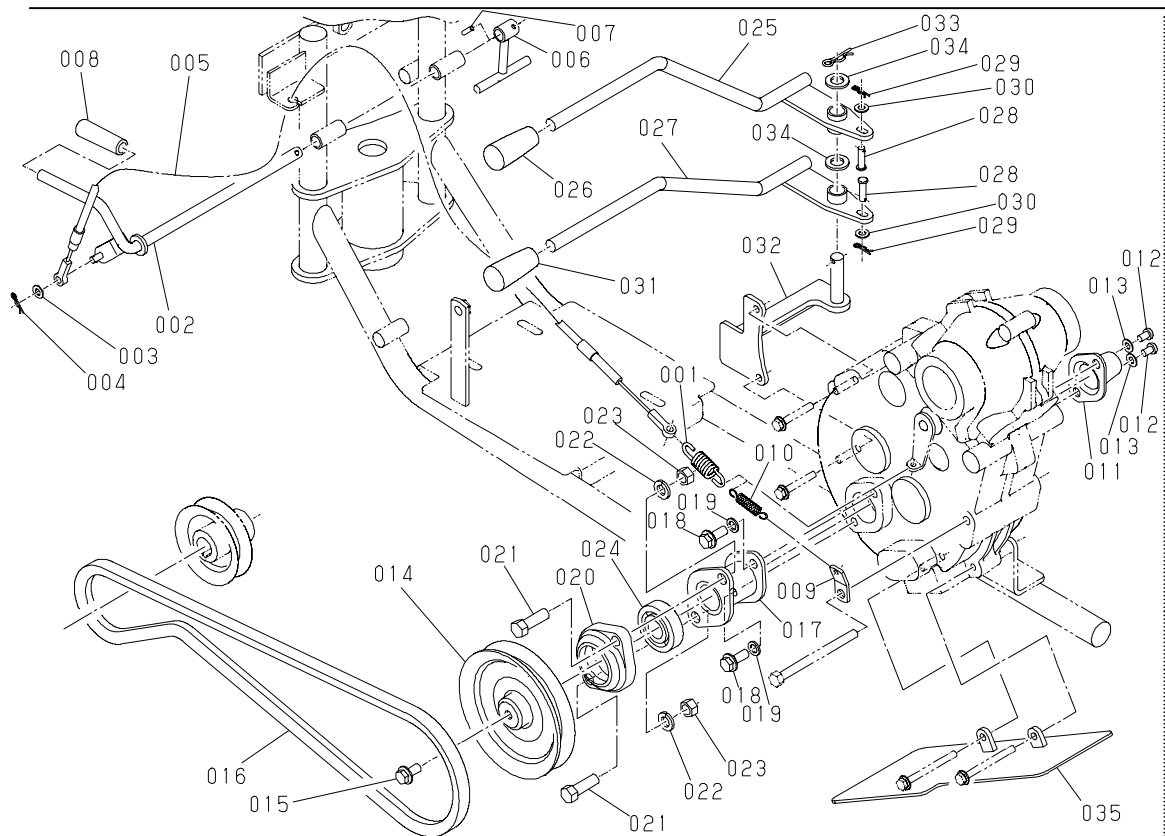

KYU-S-3(1200) 野菜運搬車

[illegible]

⇨新旧部品兼用可; ≠新旧部品兼用不可; ←新部品は旧部品に兼用可; →旧部品は新部品に兼用可

This diagram shows an exploded view of a mechanical assembly, likely a frame or support structure. The main components are labeled with numbers:

- 001**: The main horizontal frame or base plate.
- 002**: The vertical support structure or legs.
- 003**: The lower support legs or feet.
- 004**: Small fasteners or pins at the top corners.
- 005**: A bracket or connector at the top left.
- 006**: A small pin or fastener near the top left.
- 007**: A small cylindrical component, possibly a bush or spacer.
- 008**: A small plate or bracket at the bottom of the legs.
- 009**: A small cylindrical component, possibly a bush or spacer.
- 010**: A small cylindrical component, possibly a bush or spacer.
- 011**: A small pin or fastener near the bottom left.
- 012**: A small pin or fastener near the bottom left.
- 013**: A small pin or fastener near the bottom left.
- 014**: A small pin or fastener near the bottom left.

The diagram illustrates the assembly process, showing how these components fit together to form the final structure.

[illegible]

(A01:F66)

This diagram shows an exploded view of a mechanical assembly. The components are labeled with numbers and letters as follows:

- 001**: Main base plate
- 002**: Small fastener at the bottom left
- 003**: Top plate with four screws (**015**)
- 004**: Small rectangular components at the corners
- 005**: Longitudinal support rails
- 006**: Transverse support rails
- 007**: Intermediate longitudinal rails
- 008**: Screws securing the rails to the base
- 009**: Small rectangular spacers or bushings
- 010**: Screws for the base plate
- 011**: Screws for the base plate
- 012**: Screws for the base plate
- 013**: Screws for the base plate
- 014**: Screws for the top plate
- 015**: Screws for the top plate
- 016**: Screws for the base plate
- 017**: Screws for the base plate
- 018**: Screws for the base plate
- 019**: Screws for the base plate
- 020**: Screws for the base plate


Sectional callouts are indicated by letters in circles:

- (A)**: Front-left corner
- (B)**: Front-center
- (C)**: Middle-center
- (D)**: Back-center
- (E)**: Back-left corner

[illegible]

(A01:F66)

S06 前後ハンドル、クラッチレバー

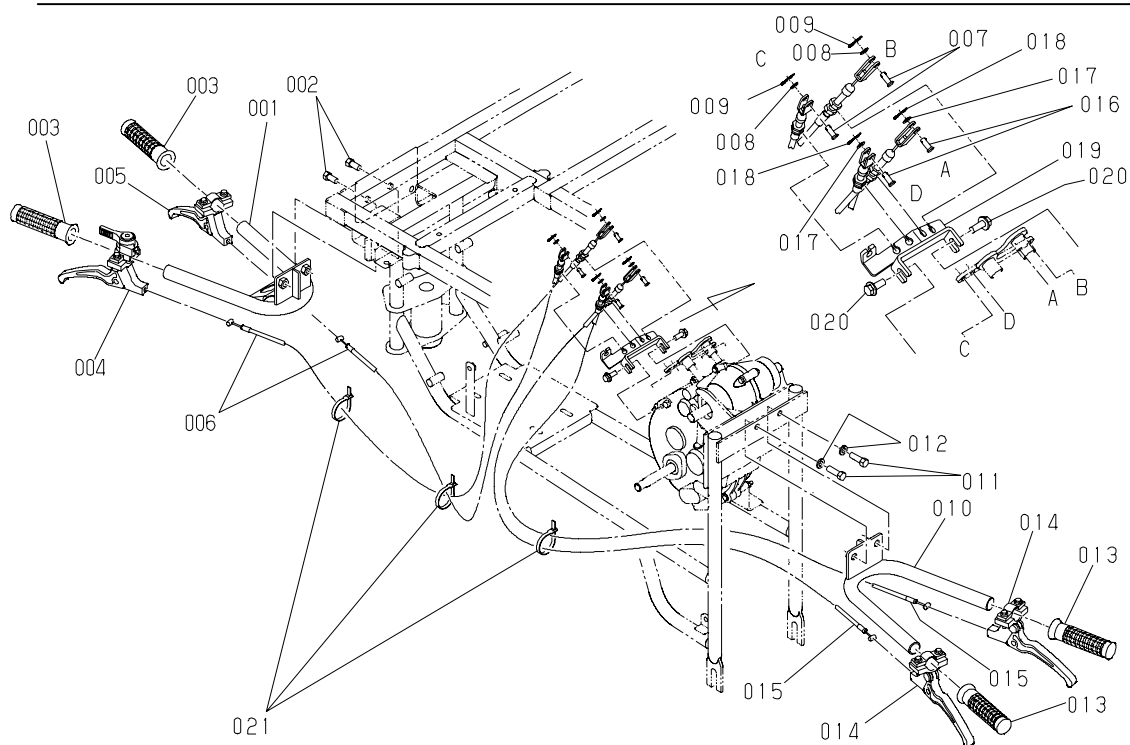


KYU-S-3(1200) 野菜運搬車

[illegible]

⇨新旧部品兼用可; ≠新旧部品兼用不可; ←新部品は旧部品に兼用可; →旧部品は新部品に兼用可

S07 駆動輪 (1/2)

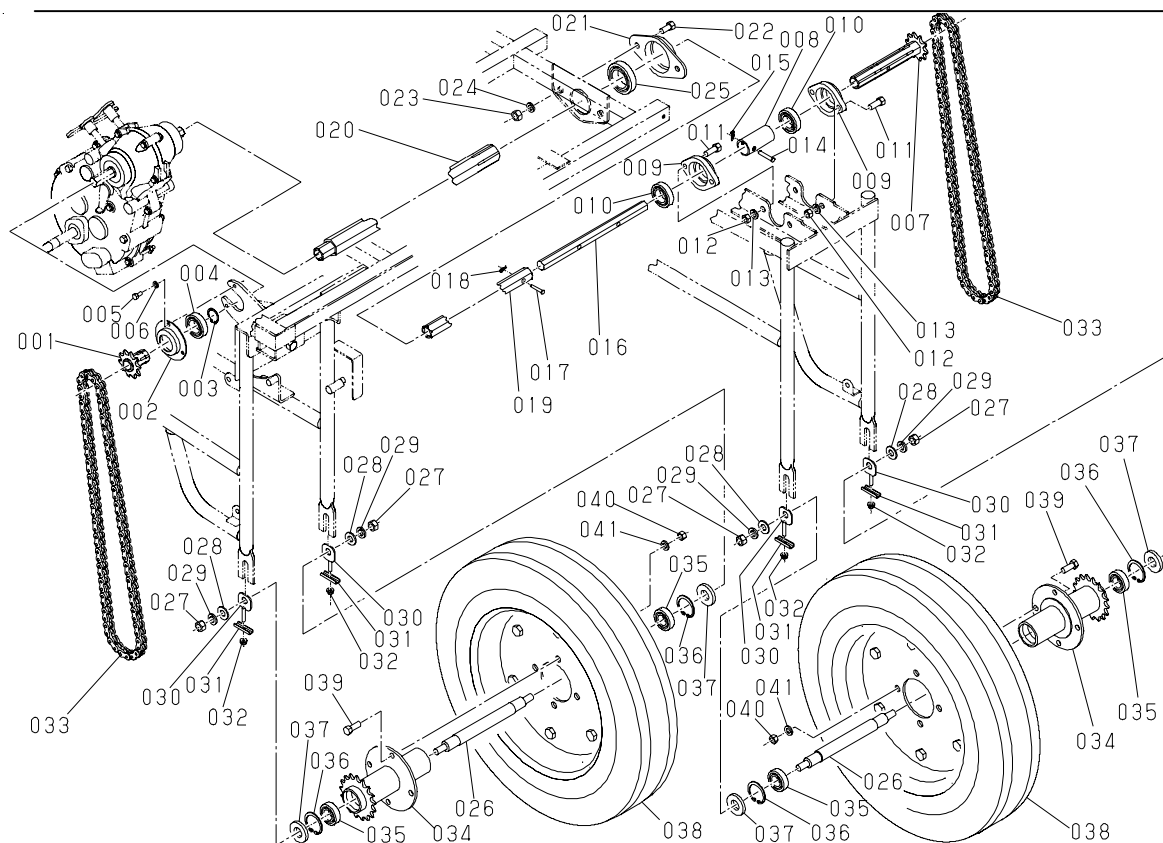


KYU-S-3(1200) 野菜運搬車

図番	品 番	部 品 名 称	数 量	互 換 性	備 考
001	271500000401000	10T スプロケットコンプ (1)	1		
002	341000001104000	ベアリングケース (3)	1		
003	0461200250	ジクサークリップ S-25	1		
004	0814106005	ボールベアリング 6005DD	1		
005	0105350612	ロックカクボルト M6×1.0×12	3		
006	0451250060	バネザガネ M6	3		
007	271600000418002	10T スプロケットコンプ (3)	1		
008	271600000420000	スペーサー	1		
009	271100000307000	ローラージクウケ	2		
010	0814106005	ボールベアリング 6005DD	2		
011	0117351025	ロックカクボルト M10×1.25×25	4		
012	0211850100	ロックカクナット M10×1.25	4		
013	0451250100	バネザガネ M10	4		
014	0512250635	ヒラアタマピン φ6×35	1		
015	0551550600	スナップピン 6	1		
016	271600000419000	ロックカクジク	1		
017	0512250530	ヒラアタマピン φ5×30	1		
018	0552550500	スナップピン 5	1		
019	271600200401000	ツナギパイプ A	1		
020	271600200402000	ツナギパイプ B	1		
021	271500000417000	ベアリングハウス	1		
022	0117351020	ロックカクボルト M10×1.25×20	2		
023	0211850120	ロックカクナット M10×1.25	2		
024	0451250100	バネザガネ M10	2		
025	0814106007	ボールベアリング 6007DD	1		
026	271600000403000	タイヤシャフト (3)	2		
027	0211850120	ロックカクナット M12×1.5	4		
028	0401350120	ヒラザガネ M12	4		
029	0451250120	バネザガネ M12	4		
030	271600000404000	チェーンツリカナグコンプ	4		

⇄新旧部品兼用可; ≠新旧部品兼用不可; ←新品は旧部品に兼用可; →旧部品は新品に兼用可

S07 駆動輪 (2/2)

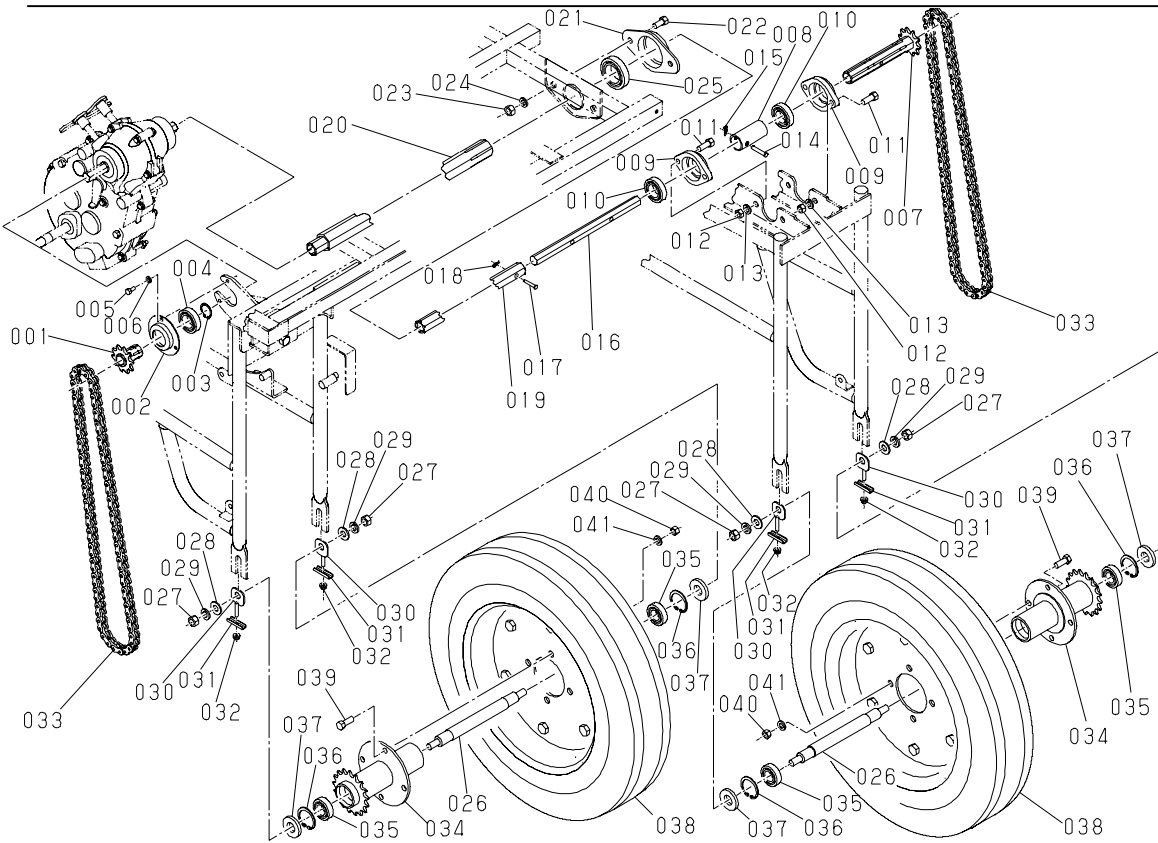


KYU-S-3(1200) 野菜運搬車

[illegible]

⇔新旧部品兼用可; ≠新旧部品兼用不可; ←新部品は旧部品に兼用可; →旧部品は新部品に兼用可

S08 キャスター輪

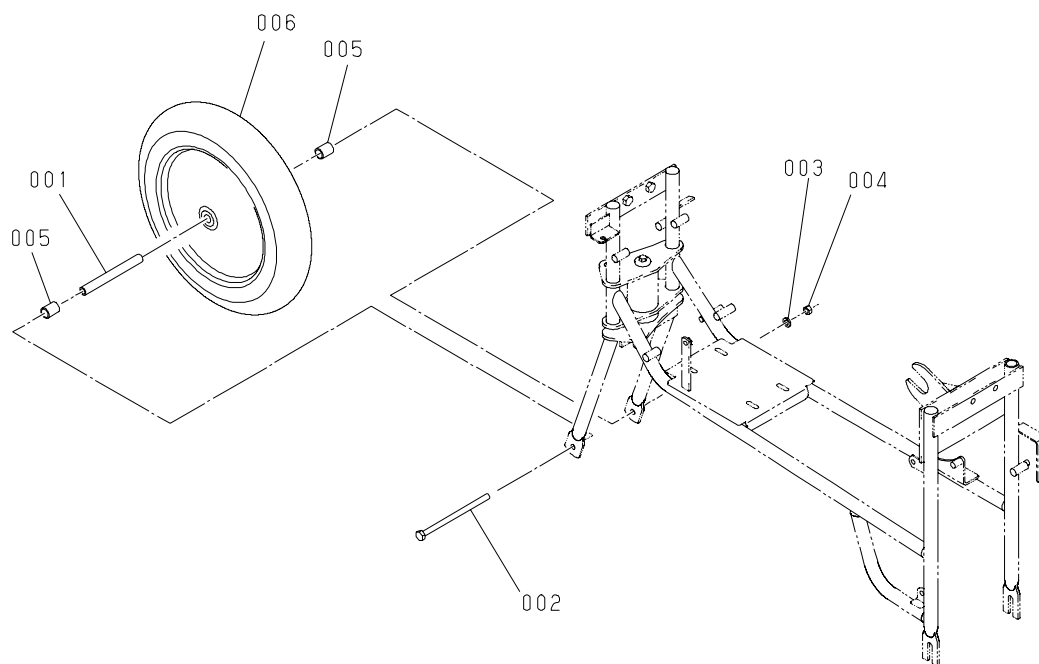


KYU-S-3(1200) 野菜運搬車

[illegible]

⇔新旧部品兼用可; ≠新旧部品兼用不可; ←新部品は旧部品に兼用可; →旧部品は新部品に兼用可

S09 チェーンカバー

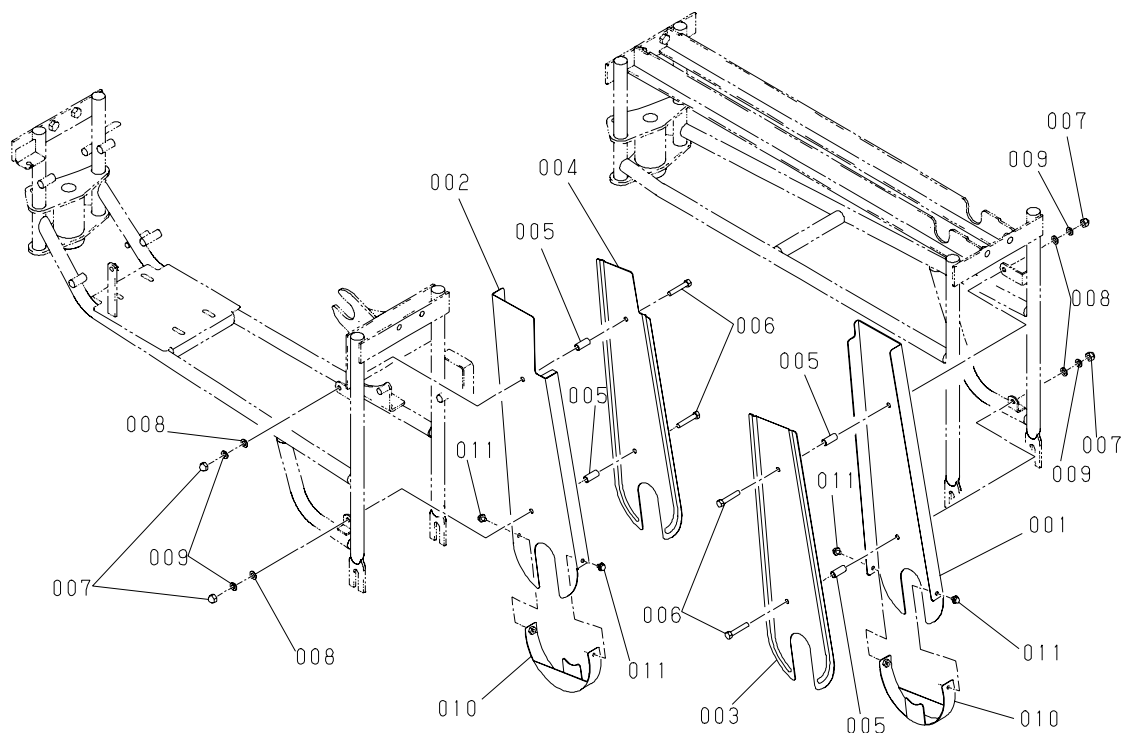


KYU-S-3(1200) 野菜運搬車

[illegible]

↔新旧部品兼用可; ≠新旧部品兼用不可; ←新部品は旧部品に兼用可; →旧部品は新部品に兼用可

S10 サイドゲート

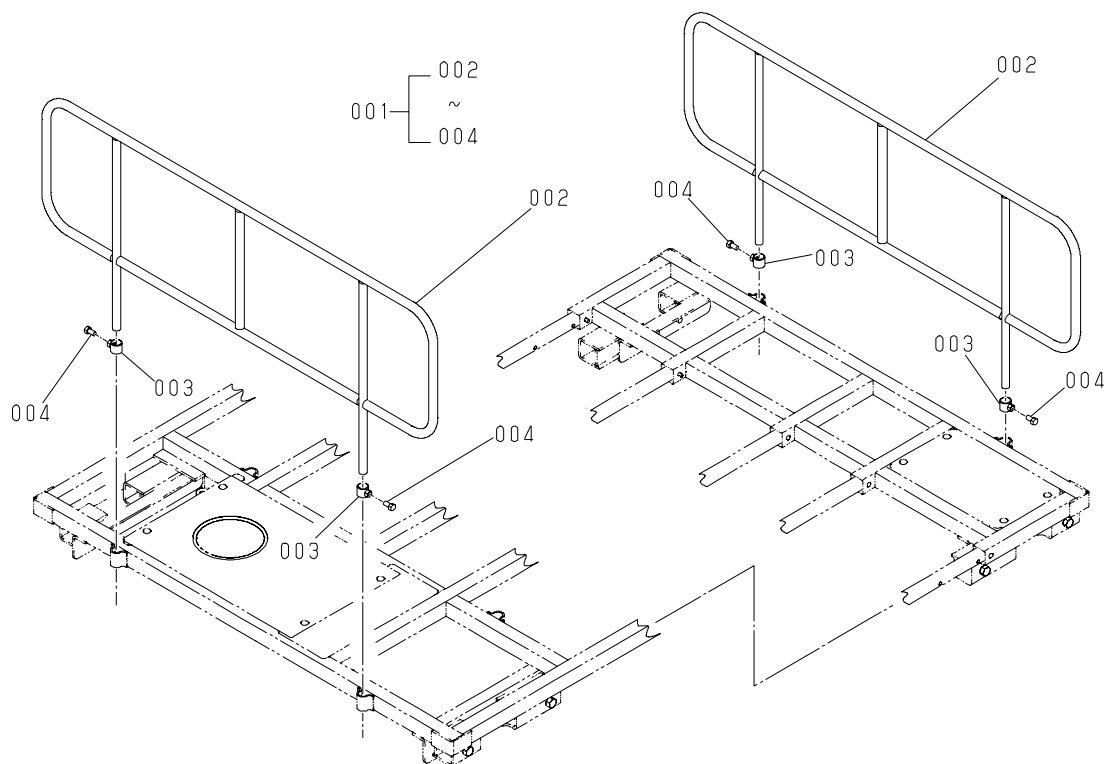


KYU-S-3(1200) 野菜運搬車

[illegible]

⇨新旧部品兼用可; ≠新旧部品兼用不可; ←新部品は旧部品に兼用可; →旧部品は新部品に兼用可

S11 オプション

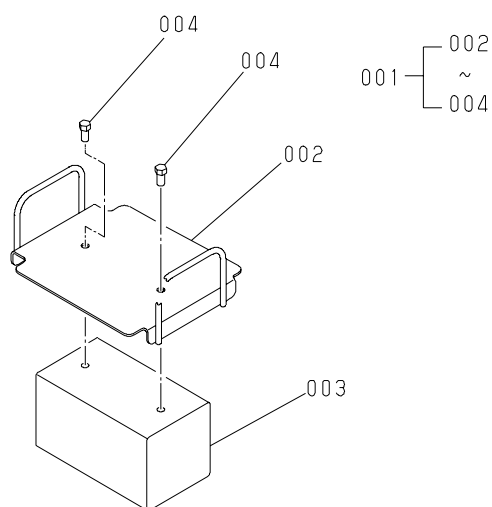


KYU-S-3(1200) 野菜運搬車

[illegible]

⇨新旧部品兼用可; ≠新旧部品兼用不可; ←新部品は旧部品に兼用可; →旧部品は新部品に兼用可

S12 ラベル

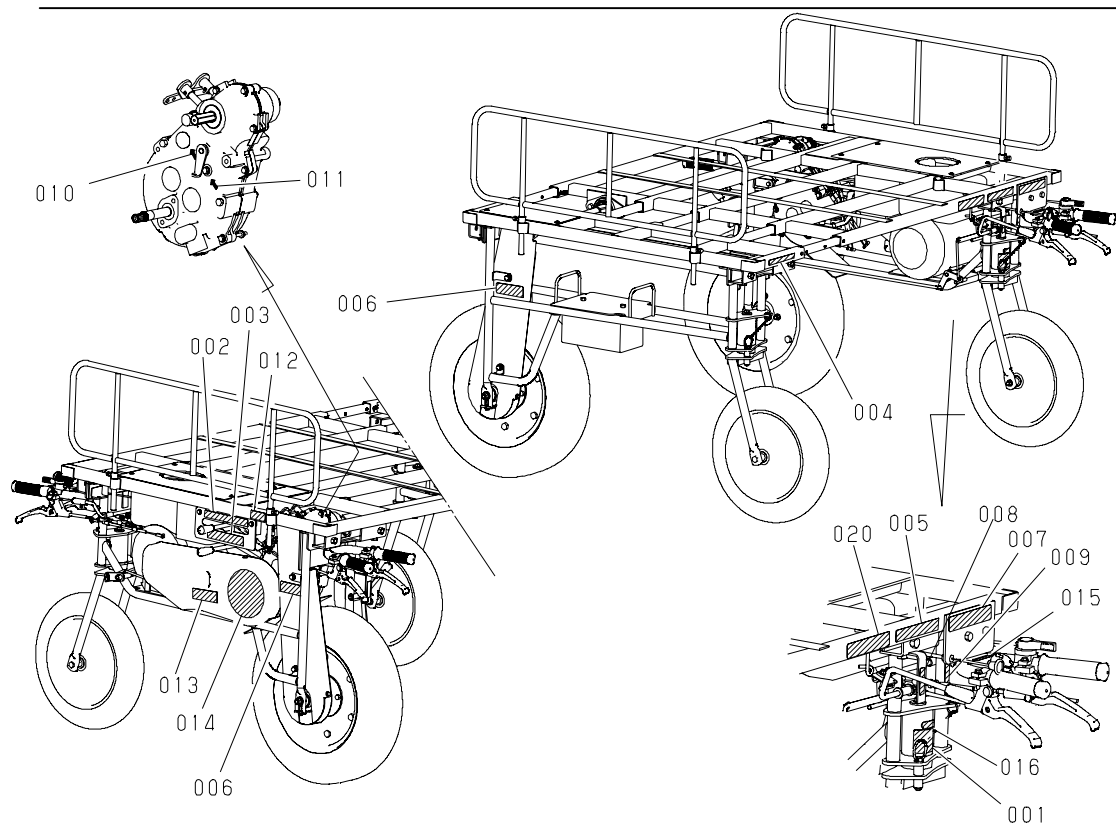

KYU-S-3(1200) 野菜運搬車

[illegible]

⇔新旧部品兼用可: ≠新旧部品兼用不可: ←新部品は旧部品に兼用可: →旧部品は新部品に兼用可

パーツリスト番号: 2716002000000000C

改訂履歴		
	2012年06月14日	初版発行